


gienic INSTALLATION GUIDE

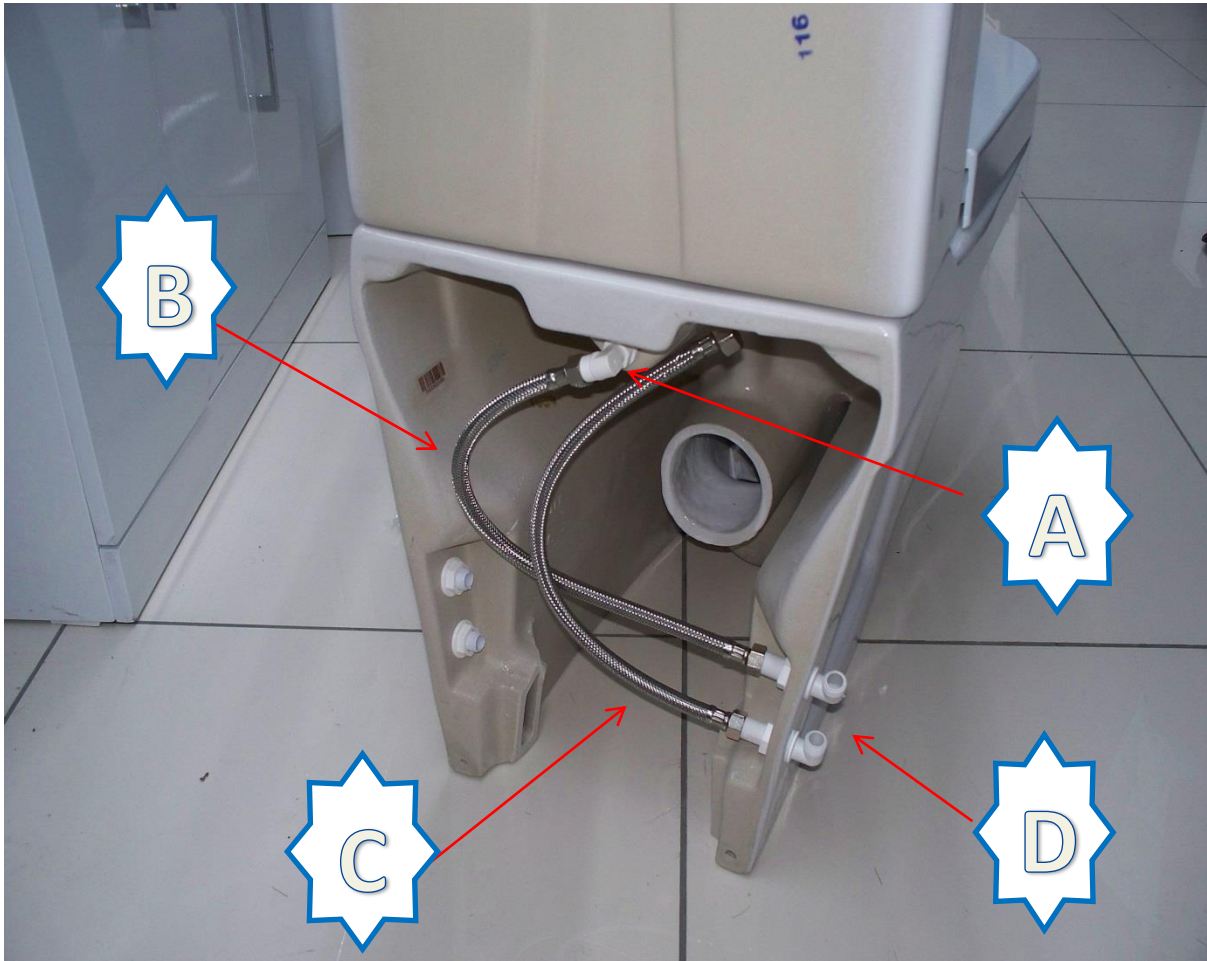

gienic INSTALLATION PACK CONTENTS:

- 1 x Water Delivery Nozzle
- 1 x Water Delivery Rod
- 1 x ABS Water Delivery Rod Connection Elbow (A)
- 1 x 3/8" x 3/8" Flexible Connector (B)
- 3 x 3/8" x 1/2" Flexible Connector (C)
- 2 x 3/8" Male Thread ABS 90 degree Elbows (D)

Step 1. Connect the water delivery nozzle to the water delivery rod and slide the rod through the pre-formed hole within the wc pan from front to back. **Step 2.** Connect the water delivery rod connection elbow to the opposite end of the water delivery rod and tighten to form the water delivery system. **Step 3.** Connect the 3/8"x3/8" flexi connector to the water delivery rod elbow and connect the opposite end to one of the male thread ABS 90 degree elbows (Please remember to insert the elbow through one of the pre-formed holes near the base of the wc pan). **Step 4.** Complete this exercise with one of the 3/8"x1/2" flexible connectors and connect the 1/2" end of the flexible connector to the wc cistern cold water feed. **Step 5.** At this point you should now have all items connected with the exception of the two remaining 3/8"x3/8" flexible connectors which can now be connected to the 3/8" male threaded 90 degree elbows and the 1/2" ends of the flexible connectors connected to the cold water feed for the wc cistern inlet and the separate cold or ambient water feed for the gienic control.

THE USE OF PTFE TAPE AND/OR SILICONE SEALANT IS NOT RECOMMENDED DURING THE ABOVE PROCESS

REQUIRES CONNECTION TO A SUITABLE WATER SUPPLY IN ACCORDANCE WITH UK WATER REGULATIONS